

### Checkup

---

- 1 Open sun roof by half.
- 2 Pull off cover by means of emergency crank and plug socket 21 mm (long) on emergency crank.
- 3 Plug torque wrench on socket and hold in place.
- 4 Let a helper operate sun roof switch and read torque. Nominal value 5 — 6 Nm.
- 5 Pull off socket and push cover over emergency crank.

### Adjustment

---

- 1 Remove emergency crank cover.
- 2 Pull off red plastic cap for emergency crank and screw in hex. nut underneath to increase torque, and screw out to reduce torque.

**Note:** To prevent drive shaft from turning along when hex. nut is screwed in or out, open sun roof when increasing the torque and close sun roof when decreasing the torque.

- 3 Turn hex. nut max. by 60°, then push on red plastic cap and check torque. Readjust, if required.

#### **Attention!**

Make sure that slip clutch is not blocking.

- 4 Push cover on emergency crank.